

OPERATING INSTRUCTIONS



BOSCH

DiBos
PAL/NTSC

Version 7. x

Copyright © 2003 BOSCH Security Systems

BOSCH

OPERATING INSTRUCTIONS

DiBos
4.998.137.631 A3

Contents

Introduction and safety instructions	3	Looking at, printing, saving, swapping out, and deleting archive images	17
Introduction to the system	4	Deleting archives / searching for archive images and additional data	18
Password	4	Connecting backup drive and / swapping out archive images on diskette	19
Logging on	4	Formatting a CD	20
Changing users/logging off	4	Export data to CD	22
Exiting the system / ending the program	4	Export data (e.g. to hard disk or network drive)	25
The basic live image window	5	Alarm simulation	27
General information	6	Connection with a remote station	28
Basic window menu bar	7	Searching for and looking at archive images from the remote station	30
Basic window toolbar / alarm simulation bar	8		
Basic window status bar / connection window	9		
Controlling a dome camera	10		
The basic image archive window	12		
Image archive menu bar	13		
Image archive toolbar	14		
Image archive toolbar / alarm simulation bar	15		
Image archive status bar / connection window /			
Recorder buttons	16		

Introduction and safety instructions

What do these operating instructions tell you?

These operating instructions provide you with all relevant information that you need in order to perform the tasks described in the table of contents quickly and easily.

You will find more detailed information about the respective screens online on your system if you press the F1 key or click the Help button.

Caution!

To avoid electrical shock, do not remove the cover. Leave all maintenance to qualified personnel.

Warning!

To avoid fire or electrical shock, never expose the device to rain or humidity.

Warning!

Installation should only be undertaken by qualified customer service personnel in accordance with all applicable electrical regulations.

Power connection!

Devices with or without power cords have voltage in the device as soon as the power cord is plugged into the outlet. However, the device is only ready for use if the power switch (ON/OFF) is on ON. If you unplug the power cable from the outlet, the voltage supply to the device is completely halted.

Note

It your are not able to accomplish some of the described steps of this manual, it may be that you don't have the righth authority level. In this case please contact your authorized dealer.

Notes on cleaning

When cleaning the surface, be sure that you do not use any caustic or scrubbing cleansers and that no liquid gets inside the device.

The device may only be operated by trained persons! For security reasons and in order to avoid faulty operation, any authorization code required for operation should only be communicated to these persons.

Service station: _____

Telephone: _____

Introduction to the system

When the computer is booted, the system runs automatically in the background and is able to respond to signals and record images. You must only log on if you wish to perform operating tasks. Only authorized users have access to operate the system, based on a password. Depending on your access privileges, with the user interface you can:

- view live images for monitoring purposes and manually switch camera views
- open the image archive and retrieve, print, and delete saved images
- perform system configuration
- perform an alarm simulation

You must log on to the system in order to commence operation.

After you have switched on the system and the live image screen appears, you will see a dialog box in the middle of the screen that invites you to log on.

Password

For the password, there are no restrictions as to the type and number of characters permitted.

You can change the password on the System menu.

Logging on

Enter your user name and password and confirm with **OK**. You are now on the live image.

The live image consists of the live image basic window, which is also displayed if no video station was selected or one or several connection windows


Changing users/logging off

On the System menu, you can change users or log off. During a change of user, the system continues to run in the background. This is recommended if you leave the system.

Exiting the system / ending the program


Select **System** from the menu bar and click **Exit system**.

Logon screen

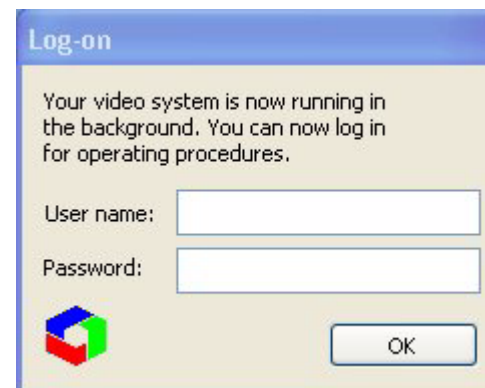

The basic live image window

General information

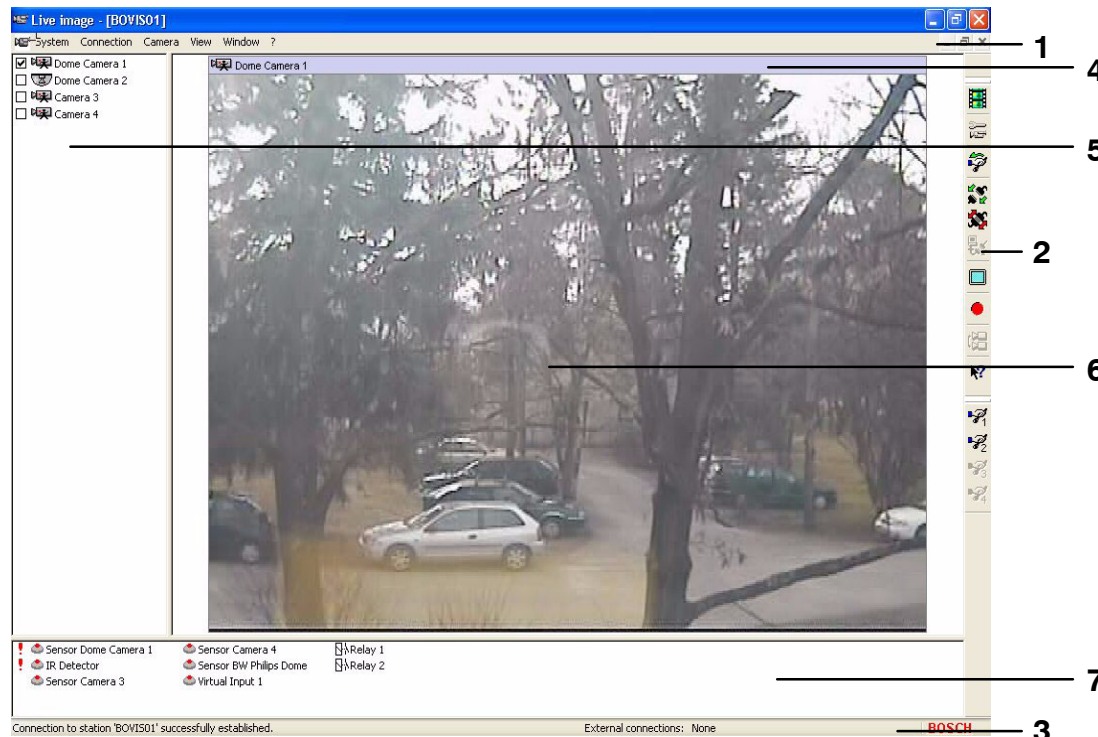

The basic live image window

- 1 Menu bar
- 2 Toolbar
- 3 Status bar

Connection window

- 4 Title bar of the connection window for the selected station
- 5 Display all configured cameras of the selected station
- 6 Display of selected camera images
- 7 Display of status of all configured alarm inputs of the selected station and relay statuses

Display of several live images

You can display several live images, depending on the number of connected and configured cameras. The live images are always arranged automatically from left to right in consecutive rows.



For each camera marked with a ☒ , a live image is shown.

The basic live image window

General information



Camera 1

Camera deactivated



Camera 1

Camera activated: if you click this box, you can activate the camera and show the live image.




If several cameras are selected and activated with the left mouse button (highlighted in blue), these camera images can all be shown together. Click ☒ to show and hide the camera images.



Dome Camera 2
Camera 3
Camera 4

If you click the Ctrl key and click the left mouse button on selected cameras, you can combine these into non-continuous camera blocks.

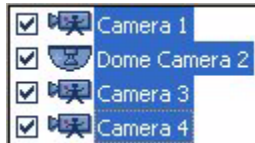

Camera 1
Dome Camera 2
Camera 3
Camera 4

If you click the Shift key and click the left mouse button on the first and last selected cameras, you can create continuous blocks.



If you click this button (in the upper right corner), you will minimize (depending out the configuration) the basic window. This gives you the opportunity to look at the minimized images and to edit texts in the interface simultaneously.



Click to return to a full-sized image.

The menu bar of the basic window in the live image

System

Image archive: change to the image archive
Configuration: change to the configuration
Alarm simulation: trigger an alarm or other actions
Change user: log the user off and log on screen for new user
Change password: change the password
Exit system: end the program (administrator)

Connection

Establish connection: establish connection via ISDN/network/modem
Terminate connection: terminate connection via ISDN/network/modem
Local connection: establish local connection (live image)

Camera

Camera switching: to the next camera selected with ☒
Image quality: image compression can be changed
save displayed
images: Activate and deactivate automatic saving
from all images displayed

View

Toolbar: on/off
Status bar: on/off
Alarm simulation bar: on/off
Video image mode: enlarges the image of the selected camera
to full-screen size


 











Windows

Tile: open windows are displayed next to one another
Cascade: open windows are displayed overlapping one another (cascading)
Arrange icons: icons can be deposited at the bottom of the window
Station X: all stations with a connection are displayed

?

Help topics: calling up online Help
Info: Info about the system, e.g. version and serial number

Basic window toolbar / alarm simulation bar in live image

Icon	Name	Explanation	Icon	Name	Explanation
	Image archive	Look at, search for, swap out or print saved images in local/remote archives.		Automatic camera switchover	Switchover of all cameras displayed.
	Configuration	Hardware, image saving, image transmission, and user settings. Not active with integrated operating station.		Help	If you place the mouse pointer over an object, you will receive help with that object.
	Alarm simulation	The configured alarm simulation buttons will be called up.		Alarm simulation	Buttons for the configured alarm simulation signals or other configured actions.
	Connect	with a remote station (network/ISDN/DSL/modem)	The alarm simulation bar can be embedded in the toolbar or free-standing.		
	Terminate	established connection will be terminated.	Embedded		
	Local connection	Connection will be established to the local system.		Alarm simulation 1 triggered Alarm simulation 2 not triggered Alarm simulation 3 and 4 not configured	
	Video image mode	Enlarges the image of the selected camera to full-screen size.	Free-standing		
	Save images displayed	Activate, deactivate automatic saving of all images displayed. With simultaneous generation of a separate archive in the image archive with the name <Computename>_normal.			

Basic window toolbar / connection window in live image

The **Status bar** (lowermost line of the screen) contains help information about the menu you are currently using. It shows the name of the remote station to which an external connection has just been established.

The **Title bar** contains:

- the window title with the name of the selected station and
- the buttons to minimize, maximize and close the window.



Clicking minimizes the window and places it at the bottom edge of the screen.



Clicking restores the window to normal size.



Terminates the existing connection

Display of the existing / approved cameras

On the left side of the screen, you will find a list of the configured cameras.



Camera 1



Dome Camera 2



Camera 3

Existing / approved cameras will be displayed in live image.

Display of the configured alarm inputs

The lower portion of the image displays all configured alarm inputs.



Sensor BW Philips Dome

Configured alarm inputs are displayed in the live image



Contact input or video motion detector of a camera



Foyer card reader / barcode reader



on

Configured relay outputs can be activated and deactivated by clicking with the right mouse button

Status display of the configured alarm inputs

The statuses of all configured alarm inputs are displayed as follows.

no icon

Input is in standby



Input has triggered





Input does not exist as hardware


Control of a dome camera

 
 Dome Camera 2 Configured dome camera

If a dome camera is configured, an arrow will appear in its live image if the user moves the mouse (variable speed) over the live image. With the left mouse button, you can control the camera in the direction of the activated arrow.


 e.g. to the left


 e.g. up

 e.g. to the right

 e.g. down

A magnifying glass appears in the middle of the screen. If you see a + sign, this means that you are zooming in on the image. If you see a – sign, the camera angle is getting larger.

 Zoom in: reduce camera angle (zoom in)

 Zoom out: enlarge camera angle (zoom out)

Note

Depending where you place the mouse cursor you operate with a variable speed.

By clicking the right mouse button on the live image, you activate the following menu:

- Dome camera control
- Positions saved
- Macros saved

Dome camera control



Here you can set the focus (sharp/ blurred) and aperture (open / close).

Positions saved

In the configuration, you can call up set camera positions here.

Macros saved

Call up saved camera commands.
(Start/end macros).

Note

Pre-positions and macros are to be configured in the set up in advance.

Please also use the online help

The image archive of the basic window

Information about image archive

You can also use the Image archive menu to open and close live image display. It enables access to and searching in:

- local and remote video system image archives and
- existing files on hard disk or diskettes.

In the image archive you have the following possibilities:

- Start configuration (in addition to the image archive)
- Call alarm simulation
- Establish an ISDN, network or modem connection to a remote station (in addition to the connection to the local station); the remote archive tree is thus shown under the local archive tree
- Swap out saved images
- Print saved images
- Search for saved images



Basic live image window

- 1 Menu bar of the image archive basic window
- 2 Toolbar of the image archive basic window
- 3 Status bar of the image archive basic window
- 4 Tree structure of configured archives

Image display window


- 5 Title bar of saved image
- 6 Display of saved images
- 7 Recorder buttons for playback of saved images
- 8 Print the displayed image
- 9 Save images on drive or diskette
- 10 Set the playback speed
- 11 Slider for further switching
- 12 Anzahl der zu überspringenden Bilder verändern
- 13 Image information about the saved image e.g. date, time, camera no., image resolution, etc.
- 14 Check authentication
- 15 Show detected cells

The image archive of the basic window

Several archive images tiled

You can display several archive images next to one another (tiled), up to a maximum of 8. The archive images are always arranged from left to right consecutively and in a row. In each image, you can use the functions of the recorder buttons.

Selecting menu tree for archive images

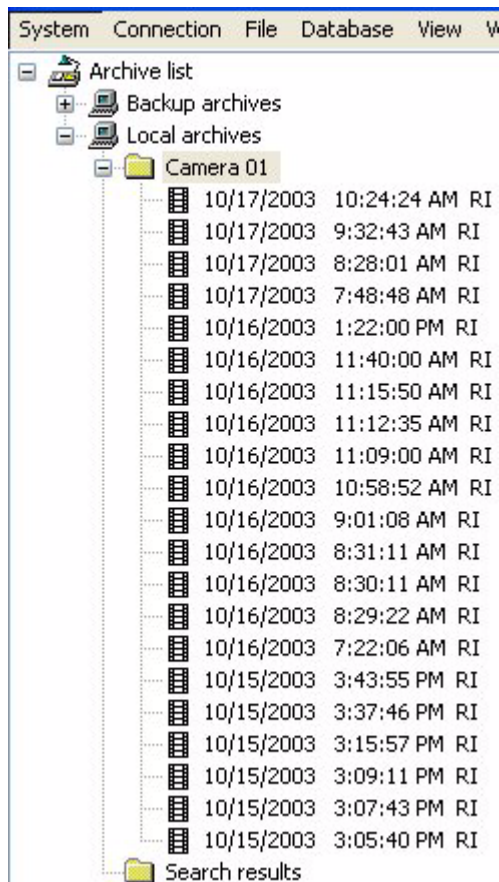

Example of image archives



Image archive menu bar

System

Live image:	change to the live image
Configuration:	change to the configuration
Alarm simulation:	trigger an alarm (depending on the configuration)
Close image archive:	close image archive basic window, return to the live image
Exit system	log off the system

Connect

Establish connection:	establish connection via network/ISDN/modem
Terminate connection:	terminate connection via network/ISDN/modem

File

Open:	open files to compare images
Logbook:	search for saved files
Print comment:	enter a print comment about the current cluster
Setup printer:	vary the print image layout, setup or selection of available printers

Database

Search dialog (individual images)	find images in archives
Search dialog (motion information)	the search dialog enables searching for and finding images in which motion has occurred
Update archive list	Update of the archive list
Database information	query about type, size, etc.
Select backup drive:	The backup drives are displayed and can be selected. They are displayed in the archive list.
Hide backup drive:	The backup drives are hidden in the archive list
Export to CD	Data can be exported to CD.
Export to backup drives	Data can, e.g. be exported to hard drive and network drive.

View

Toolbar:	on/off
Status bar:	on/off
Alarm simulation bar:	on/off
Archive list:	on/off

?

Help topics:	call up online Help
Info:	Info about the system, e.g. version and serial number

Image archive toolbar















 

Icon	Name	Explanation	Icon	Name	Explanation
	Live image	Switchover to live image display.		Print	The selected image can be printed with additional information.
	Configuration	Hardware, image saving, image transmission, and user settings. Not active with integrated operating station.		Search dialog (single image)	Search and find images in local or remote archives and their automatic saving.
	Alarm simulation	Alarm simulation can be called up depending on the configuration.		Images in original size	Possible display of the image in original size.
	Connect	Establish a connection with a remote station via ISDN/network/modem.		Image information on/off	The display of image information can be deactivated in favor of a larger window display.
	Terminate	Established connection will be terminated.		Archive list on/off	Display of the archive list can be deactivated.
	Open	Image archives located on hard disk or diskette can be opened and displayed.		Arrange all windows	Automatically arranges all windows.
	Save as	Selected images can be swapped out on hard disk or diskette.		Help topics	Call up online Help
	Export to CD	Data can be exported to CD.		Help	Help for image archive

Image archive toolbar / alarm simulation bar





Icon	Name	Explanation
	Alarm simulation	Buttons for the configured alarm simulation signals or other configured actions.
<p>The alarm simulation bar can be embedded in the toolbar or free-standing.</p> <p>Embedded</p> <div>  <div> <p>Alarm simulation 1 triggered</p> <p>Alarm simulation 2 not triggered</p> <p>Alarm simulation 3 and 4 not configured</p> </div> </div> <p>Free-standing</p> 		


Image archive status bar / connection window / recorder buttons


The **Status bar** (lowermost line of the screen) contains help information about the menu you are currently using. It shows the name of the remote station to which an external connection has just been established.

The **Title bar** contains:


- the window title with the name of the selected station and
- the buttons to minimize, maximize and close the window.

 Clicking minimizes the window and places it at the bottom edge of the screen.

 Clicking restores the window to normal size.


 Terminates the existing connection


Display of configured archives

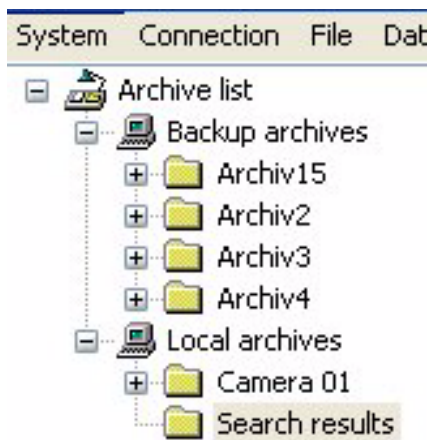


On the left side of the screen, you will find a list of the configured archives.

The recorder buttons

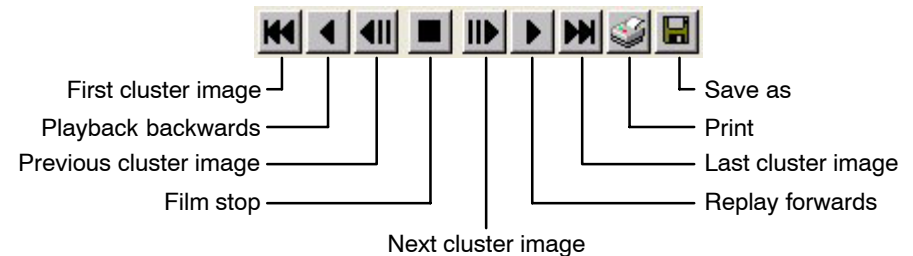

 Changes the playback speed.

  Jumps ahead within the images of a cluster.

☒ verify authentication info Here you have the opportunity to check whether the stored images were changed.

☒ show detected cells This information (detected motion in the image) is only available for images that were recorded with activated motion detection function.



Example: movement in image

Looking at, printing, saving, swapping out, and deleting archive images

You are now on the live image means you are logged into the system.

Looking at archive images

1. From the **System** menu, select the **Image archive** command. The image archive will be opened.
2. Open the archive by clicking in front of the archive name.
3. Double-click on the first entry of the relevant day. You will see the first image of the saved film sequence.
4. Let the film run ventually reduce the playback speed. To do this, use the recorder buttons at the bottom of the image window.

Print archive images

1. Use the recorder buttons to navigate to the images that you would like to print. Keep in mind that you can only print the image that is currently displayed on the screen.
2. If necessary, change the format on the **File/Setup printer** menu and on the **File/Print comment** menu, enter a comment about the cluster. This note will only be printed in panel format.
3. Click the **Print** icon, which you will find at the buttons of the image window.

Save archive images

Use the recorder buttons to navigate to the images that you would like to save. Keep in mind that you can only save the image that is currently displayed on the screen.

Click on the **Save** icon, which you will find at the bottom of the image window and on the **Save as** dialog box, enter the file name with the ending .jpg. Saving will occur without any additional image information!

or with the ending HTML (recommended). Saving occurs with additional image information!

Swap out archive images

1. Your backup drive must be connected. If not, please connect it.
2. From the **Database** menu, select the command **Show backup drive**. A dialog box for selecting the backup drive appears.
3. On the **Selection backup drive** dialog box, click on the drive. Confirm with **OK**.
4. From the **Database** menu, select the **Swap out backup drive** command. A dialog box for searching the archive will open.
5. Enter the archive to be swapped out and if necessary, additional criteria, and click the **Search** button.
The system will search.
6. Enter the backup archive name and confirm with **OK**.
7. On the **Database** menu, deactivate the command **Show backup drive**.

Delete archive images

Before exiting the system, make sure there is sufficient storage space, e.g. by deleting. If you click the left mouse button on the relevant cluster and then click the right mouse button, you will delete it.

Attention:

Some backup drives may only be removed or connected when DiBos is switched off!
For details, read the manual for your backup drive.

Deleting archives / searching for archive images and additional data


You are now on the live image

Deleting old search results


1. From the **System** menu, select the **Image archive** command. The image archive will be opened.
2. On the archive tree, click on the + sign in front of the archive. The archive will be opened, the image clusters will be shown.
3. Select the clusters to be deleted in the archive by clicking with the right mouse button and selecting the **Delete** command from the menu that opens. You will see another confirmation box.
4. Confirm the deletion with **Yes**.
5. From the **Database** menu, select the **Search (single images)** command. A dialog box for searching the archive will open.
6. Enter the search criteria and/or the archives to be searched and click the **Search** button. The images found will be saved in the local archive **Search results**.
7. The images found in the search results archive can be looked at, printed, saved, and swapped out.

Image search for additional data

Search dialog (single images)

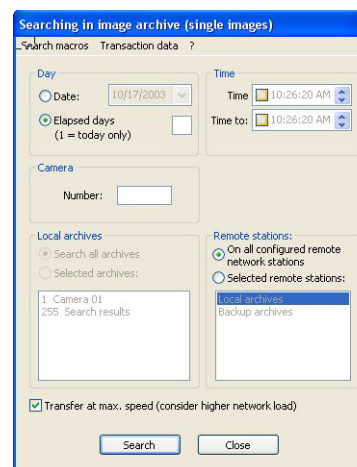

Search dialog (motion information)

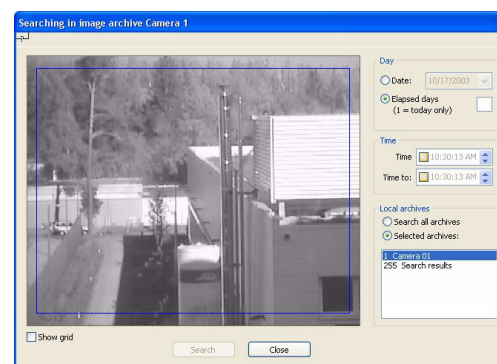

Note

This function is only working for images which one record through the internal motion detection, not for continuously recorded images.

For a targeted search, an image selection can be displayed on the camera image. If you click the left mouse button, you will see a (+) sign. You can set several selections next to one another or individually. If you click the right mouse button, you will see a (-) sign. Now you can modify or remove image selections. Enter the search criteria and click Search.

Connecting backup drive and / swapping out archive images on diskette

Saving saved archive images on diskette

- Saving archive images**
(single images)
1. Carry out steps 1 – 4 under **Looking at saved archive images**.
 2. Use the recorder buttons to navigate to the images that you want to save. Keep in mind that you can only save the image that is currently displayed on the screen.
 3. Click on the Save icon, which you will find at the bottom of the image window and on the Save as dialog box, enter the file name with the ending .jpg.

Connecting a backup drive

- Connect backup drive**
1. Exit DiBos from the **System** menu with the **Exit DiBos** command . You must have administrator authorization to do this.
 2. Switch the computer off.
 3. Connect the backup medium.
 4. Switch the computer on and log on.

Swapping out saved archive images on a backup drive


- Images**
1. Your backup drive must be connected. If not, see **Connecting a backup drive**.
 2. From the **System** menu, select the **Image archive** command. The image archive will be opened.
 3. From the **Database** menu, select the **Show backup drive** command . A dialog box for selecting the backup drive appears.
 4. On the **Select backup drive** dialog box, click on the drive. Confirm with **OK**.
 5. From the **Database** menu, select the **Swap out backup** command. A dialog box for searching the archive will open.
 6. Enter the archive to be swapped out and, if necessary, additional criteria and click **Search**. The system will search.
 7. Enter the new backup archive name and confirm with **OK**.
 8. On the **Database** menu, deactivate the command **Show backup drive**.

Formatting a CD

Call up the taskbar. It is located below your status bar. If it is not shown, call it up with the keyboard using the Windows key. You will find the CD icon on the right side of the taskbar. Click on the dialog box for the desired action and confirm. Bosch recommends using CD-R disk as they do not require as long of a formatting time, (formatting CD RW can take up to 20 minutes).



If you see a red character, this CD is already formatted.

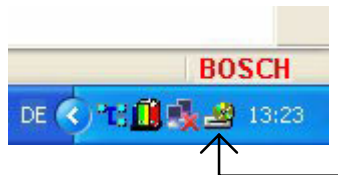


Double-click on this icon. If the icon does not have a red character, this CD must be formatted.



After you double-click, this dialog window will be activated. Place a blank CD in the drive and click **Format CD**.



Enter a name. Continue with **Start format**. The CD is formatted.

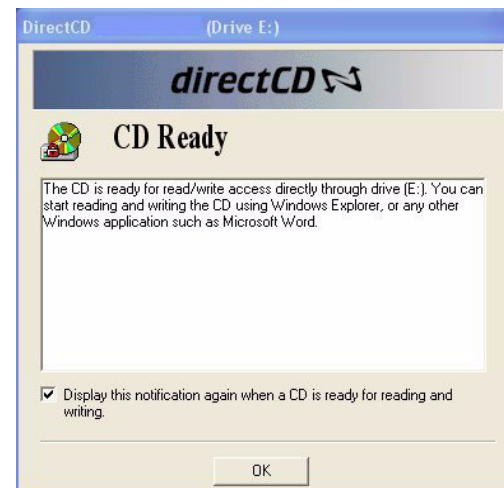


The CD is read for read/write access. Confirm with **OK**

Formatting a CD



If you want to eject the CD, click the **eject** button.

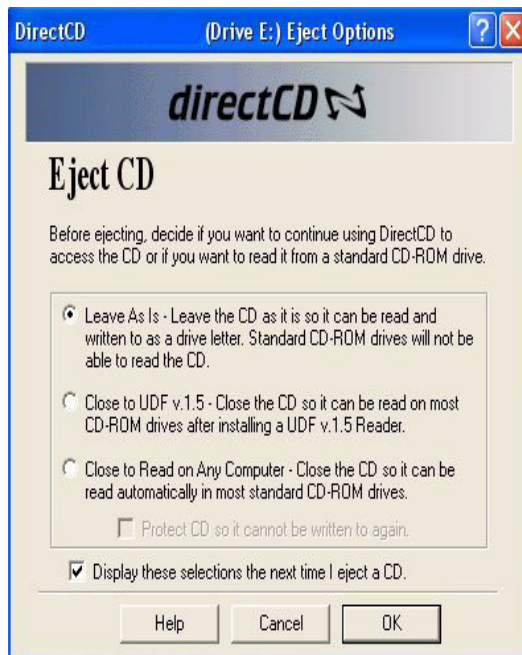

Click next to one of the options and confirm with **OK**.

Export data to CD

You must be in the image archive to export data to a CD.

When exporting proceed as follows:

- Place a CD into the CD writer and format it (see "Formatting a CD").
- In the toolbar, click on the CD symbol, or in the **Database** menu, click on **Export to CD**.

The search dialog box is displayed.

- If necessary, change the search criteria in the search dialog box. If necessary, click on the **Transaction data – show** tab if you wish to search for data from automatic cash dispensers and barcode scanners.


Note: If you have opened the image that you wish to save, DiBos will automatically export this image and an extra 5 minutes onto CD.

Click on **Export**.

1	Day – Date	Date on which the images are to be searched for.
2	Time From: Until:	Time within which the images are to be searched for.
3	Elapsed days	Number of days passed. Always includes the present day.
4	Camera – Number	Number of camera.
5	Local archives Search all archives Selected archive:	All the archives are searched. The search is only performed in those archives which you select in the following list box.
6	Remote stations On all configured remote network stations Selected remote stations	All parameterized remote stations are searched. The search is only performed in those remote stations which you select in the following list box. Note: Local archives only refer to the local computer.
7	Transfer at max. speed	If this function is selected, the images found in a network are transmitted at the greatest possible speed. Please note that the transmission rate depends on network activity. Therefore, activation of this function is only practical in dedicated networked video systems or at times at which there is no "non-video technology" data activity on the network
8	Transaction data (optional)	You can search for the account number, BRC, credit card number etc. for automatic cash dispensers.
9	Scan code (optional)	A scan code search can be performed for a barcode scanner.


Export data to CD

- This is followed by a new dialog box.
Enter the archive name, e.g. East Gate, and click on **OK**.

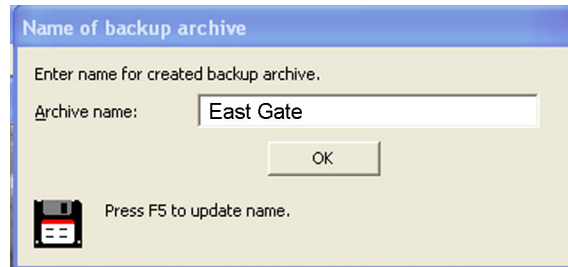

A backup archive with this name is created in the archive list of the image archive.


- Click on **Close** to export the detected images onto the CD.

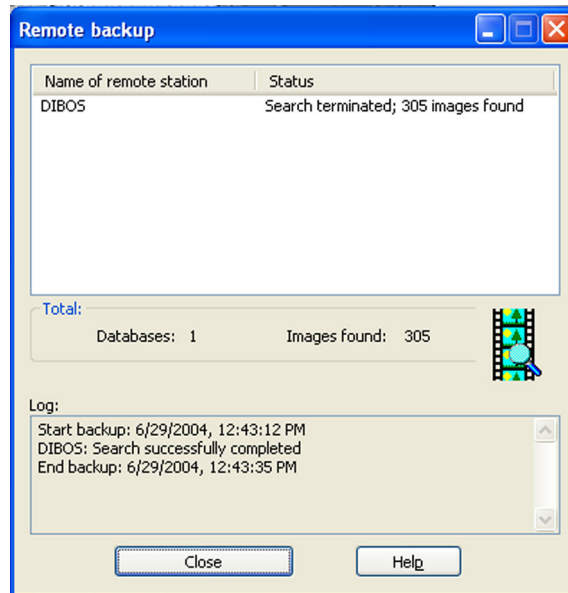

Once recording is finished, the images can then be viewed in the image archive. To do so, click on the archive in the archive list.


- In the **Database** menu, click on **Hide backup drive**.
The backup archive is hidden from view in the archive list of the image archive.

 - Click here on the CD symbol at the bottom right of the status bar.




The directCD dialog box is displayed.

- In the directCD dialog box, click on **Eject**.

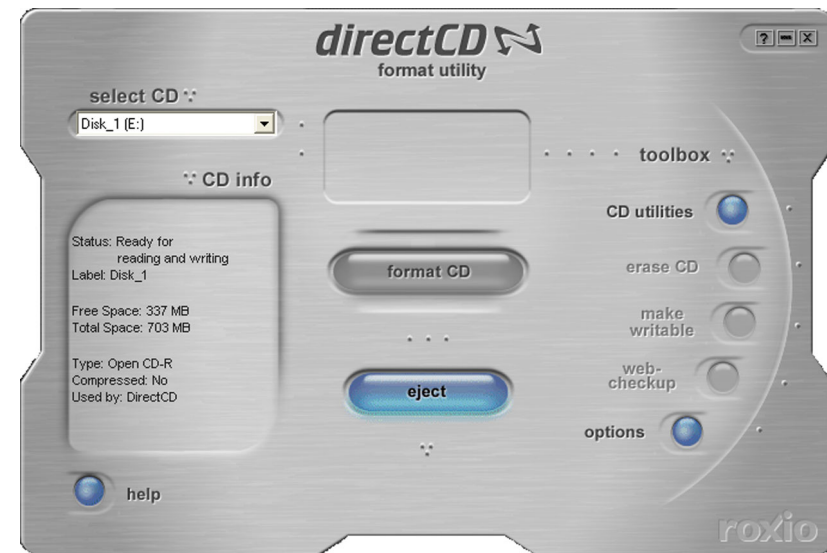

Export data to CD

- Activate the function
Close to Read on Any Computer – Close the CD so it can be read . . .
and
Protect CD so it cannot be written to again.
- Click on **OK**.

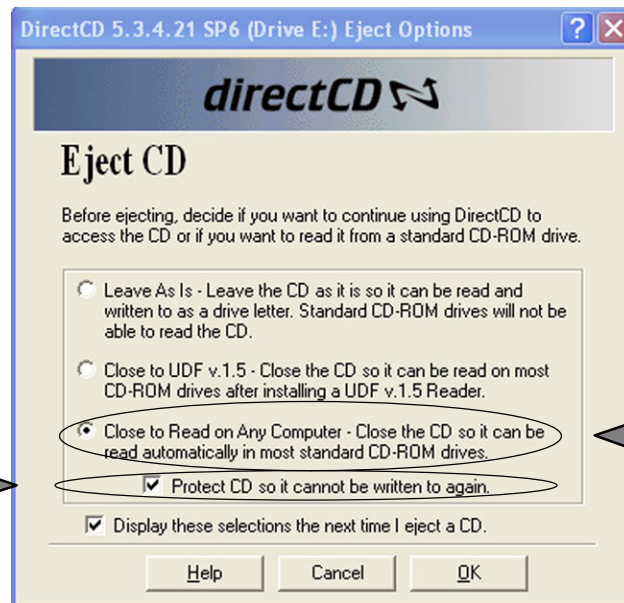


The CD writer is opened.

Export data (e.g. to hard disk or network drive)

You must be in the image archive to export data.

Proceed as follows for remote storage:


- In the **Database** menu, click on **Select backup drive**. Select a drive and confirm with **OK**.

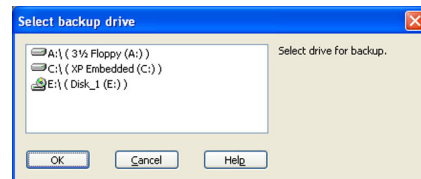

- In the **Database** menu, click on **Export to backup drive**. The search dialog box is displayed.
- If necessary, change the search criteria in the search dialog box. If necessary, click on the **Transaction data – show** tab if you wish to search for data from automatic cash dispensers and barcode scanners.

Click on **Export**.


Note: If you have opened the image that you wish to export, this image and an extra 5 minutes are automatically exported onto CD.

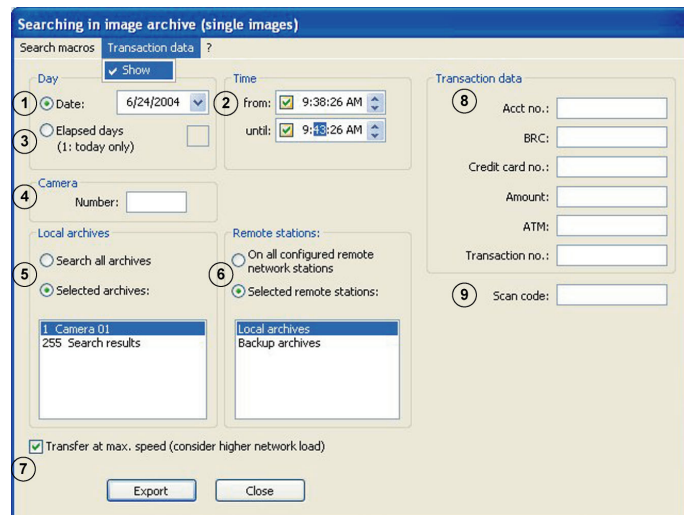

1	Day – Date	Date on which the images are to be searched for.
2	Time From: Until:	Time within which the images are to be searched for.
3	Elapsed days	Number of days passed. Always includes the present day.
4	Camera – Number	Number of camera.
5	Local archives Search all archives Selected archive:	All the archives are searched. The search is only performed in those archives which you select in the following list box.
6	Remote stations On all configured remote network stations Selected remote stations	All parameterized remote stations are searched. The search is only performed in those remote stations which you select in the following list box. Note: Local archives only refer to the local computer.
7	Transfer at max. speed	If this function is selected, the images found in a network are transmitted at the greatest possible speed. Please note that the transmission rate depends on network activity. Therefore, activation of this function is only practical in dedicated networked video systems or at times at which there is no "non-video technology" data activity on the network
8	Transaction data (optional)	You can search for the account number, BRC, credit card number etc. for automatic cash dispensers.
9	Scan code (optional)	A scan code search can be performed for a barcode scanner.


Export data (e.g. to hard disk or network drive)

- This is followed by a new dialog box.
Enter the archive name, e.g. East Gate, and click on **OK**.

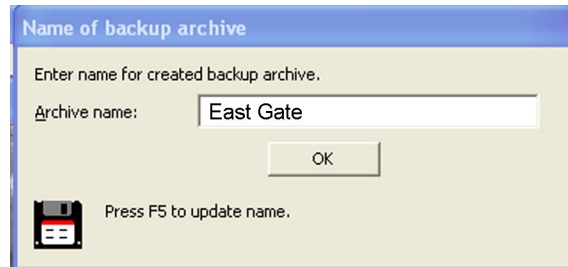

A backup archive with this name is created in the archive list of the image archive.

- Click on **Close** to export the detected images.

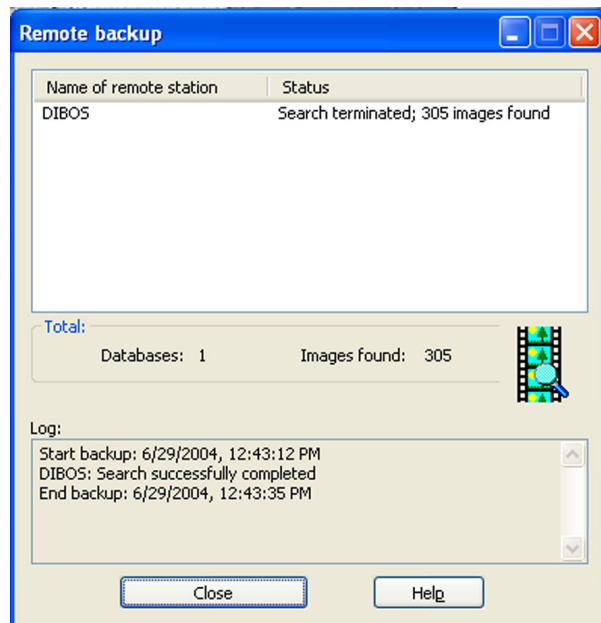

Once exporting is finished the images can then be viewed in the image archive. To do so, click on the archive in the archive list.

- In the **Database** menu, click on **Hide backup drive** or close the image archive.
The backup archive is hidden from view in the archive list.

Alarm simulation

If alarm simulation signals are configured, you will be able to see this from the buttons shown (see alarm simulation bar) and from whether the **Alarm simulation** element is active on the **System** menu.

If you select alarm simulation, a dialog box in which you can trigger alarms for a maximum of four detectors will appear. Another click on the alarm button will cancel the simulation.



The alarm is represented on the simulation detector (connection window) by a red exclamation point.

A second possibility for alarm simulation is to use the alarm simulation bar.



To carry out an alarm simulation, click on the corresponding simulation button. Thus the color of the button changes and the alarm is represented on the simulation detector (connection window) by a red exclamation point.

Connection with a remote station

Incoming alarm connection

You are on the live image view of an image receiver

Automatic connection established by a remote station on alarm

On alarm, an external station automatically establishes image transmission to your system and the images transmitted can be saved automatically by the receiver in the archive **<Remote station> Alarm**.

Camera selection for external station

Activating/deactivating saving on the image receiver

Disconnect

Click on the icons for the individual cameras to see their images.

On the **Display** menu, you can display several cameras per remote station simultaneously. During image transmission, you can cancel image saving. This can be useful if no relevant procedures are running and you wish to save storage space in your archive.

In this case, deactivate by clicking

- Save received images **on the Camera menu** or
- the icon on the right-hand side of the screen (red circle).

Note: Deactivating the saving process relates only to the current signal. A new signal is saved automatically.

If saving should be continued, activate it by clicking

- the **Save received images** command from the **Camera** menu or
- the icon on the right-hand side of the screen.

On the Connect menu, click the command and confirm the query as to whether you really want to disconnect with **Yes**.

Connection with a remote station

Looking at live images, performing control procedures on a remote station

You are now on the live image

Establish connection

From the **Connection** menu, select the **Connection** command.
The Connection dialog box opens.
Select the desired connection type, e.g. **ISDN/network**.
Click on the remote station in the list box and confirm with **OK**.
The connection to the remote station is established.

Select camera

In the image window, on the icons for the individual cameras to see their images. On the **Display** menu, you can display several cameras per remote station simultaneously.

Control relay outputs

Disconnect

From the **Camera** menu, select the **Camera switchover** command.

The Automatic camera switchover dialog box opens.

In the dialog box, specify the cameras that should be affected by the switchover. If necessary, consult the online Help.

From the **Relay** menu, select the **Relay...** command. The relay output is controlled (e.g. light on). Clicking the command again will reset the control procedure.

On the Connect menu, click the **Disconnect** command and confirm the query as to whether you really want to disconnect with **Yes**.

Searching for and looking at archive images from the remote station

You are now on the live image

Open image archive	From the System menu, select the Image archive command. The image archive will be opened.
Establish connection	From the Connection menu, select the establish connection command. The Connection dialog box opens. Select the desired connection type, e.g. ISDN/network/modem . Click on the remote station in the box and confirm with OK . The connection to the remote station is established. In the archive tree, the archives of the remote station will appear under its name.
Select remote station	By selecting the remote station, you can the area to be searched on the remote station on the next dialog; you can limit the search area to particular archives.

Search for images on the remote station

Looking at archive images of the remote station

Disconnect

From the **Database** menu, select the **Search dialog (single images)** command. A dialog box for searching the archive will open. Enter the search criteria and/or the archives to be searched and click the **Search** button. The images found will be saved on your system in the **<Remote station> Search** archive. Open the archive by clicking on the symbol in front of the archive name. Double-click on the relevant entry. You will see the first image of the saved film sequence. Let the film run. To do this, use the recorder buttons at the bottom of the image window. On the Connection menu, click the **Disconnect** command and confirm the query as to whether you really want to disconnect with **Yes**.

Notes

BOSCH

Sicherheitssysteme GmbH, Robert-Koch-Strasse 100,
D-85521 Ottobrunn, (Postfach 1270, D-85504 Ottobrunn)
Telefon (089) 6290-0, Fax (089) 6290-1020

614-4.998.137.631

Edition: 3

Status: 06-2004